


**REPAIR KIT  
P/N: 1786-32**

**INSTALLATION INSTRUCTIONS**

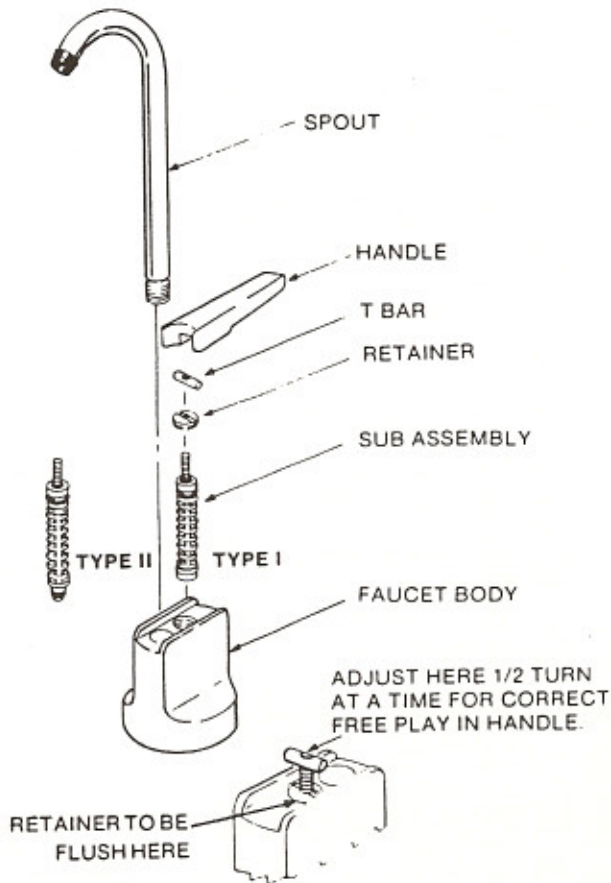

1. Unscrew spout
2. Remove handle
3. Unscrew T bar
4. Unscrew retainer  
(use screwdrive adaptor)
5. Remove sub-assembly  
(match old sub-assembly to  
new one, type I or type II)
6. Insert new sub-assembly  
(use oil or vaseline)
7. Re-assemble
8. Retainer must be flush with  
surface as shown

**IMPORTANT:** The black handle  
must be loose.

75. E. Palm Ave., Burbank, Calif. 91502

818/843-8117